
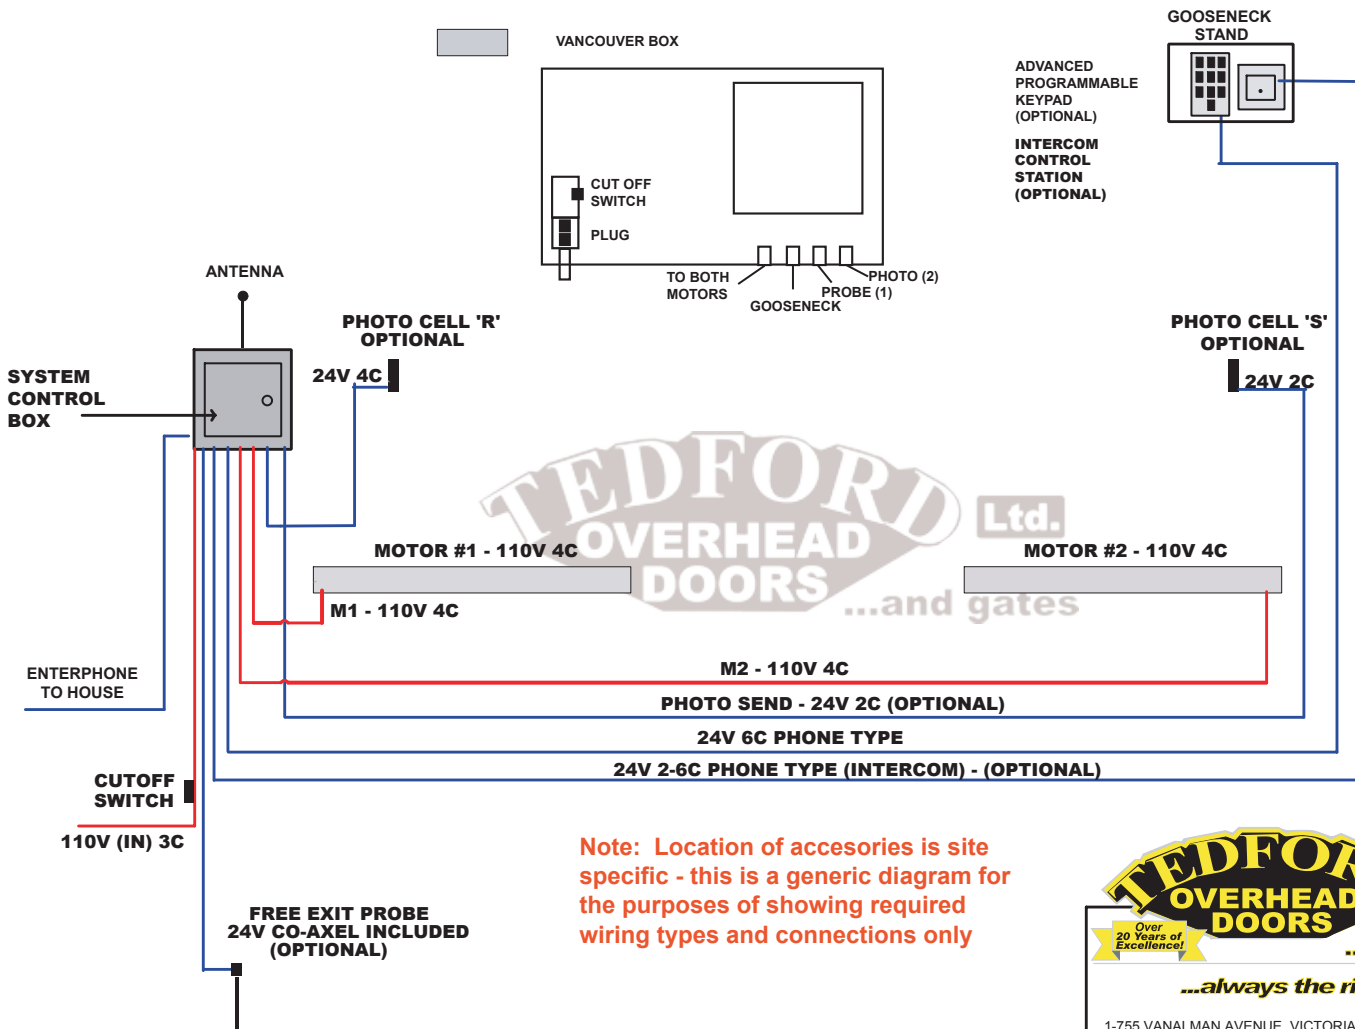


BASIC WIRING DIAGRAM AND PILLAR PREPARATION

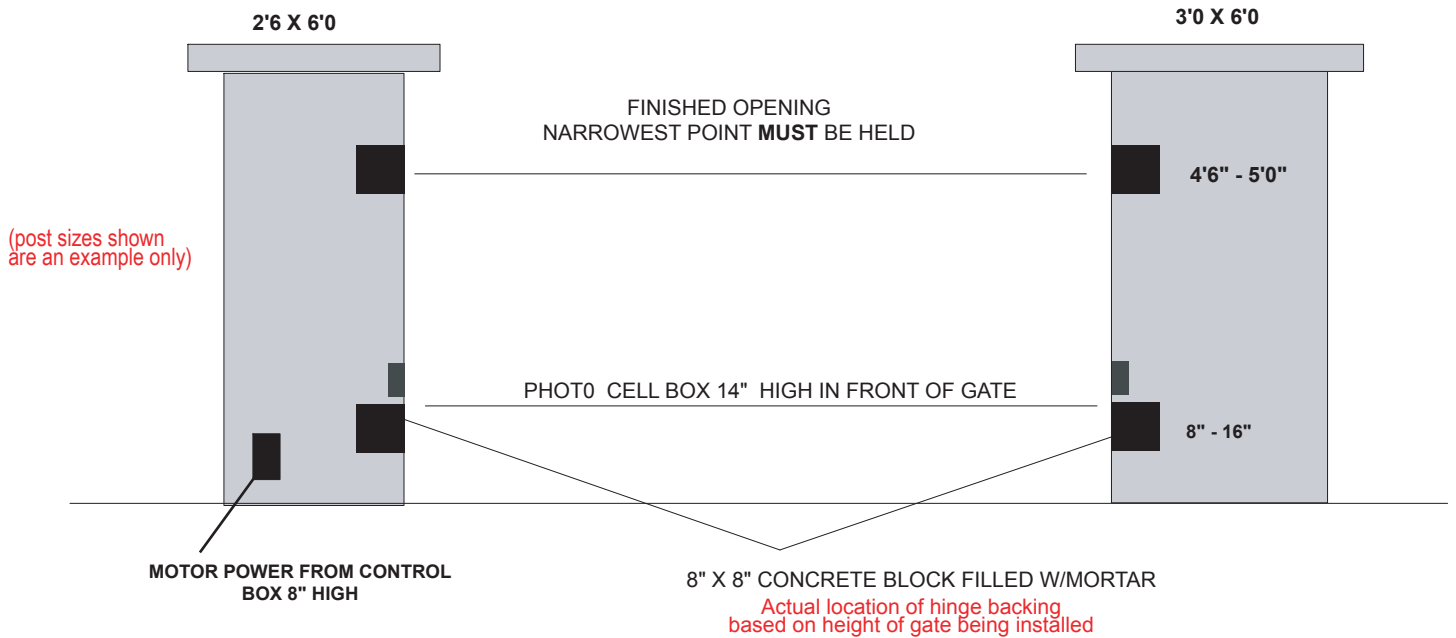

Note: Location of accessories is site specific - this is a generic diagram for the purposes of showing required wiring types and connections only

TEDFORD OVERHEAD DOORS Ltd. ...and gates

Over 20 Years of Excellence!

...always the right choice!

1-755 VANALMAN AVENUE, VICTORIA, B.C. V8Z 3B8
PHONE 250-727-6811, FAX 250-727-2859,
WEB WWW.TEDFORDDOORS.COM